

# EM2020 RotoBolt Electronic Lock. EN

The lock operates with a numeric six-digit code or a word with 6 letters.  
A secondary code can be added.  
Each key press is confirmed with an audio and light signal.

## Locking:

Close door and turn handle fully to closing position.  
The lock is secured. Control blocking status by trying to turn handle back.

## Manipulation protection:

Entry of four consecutive invalid codes – keypad is blocked for 5 minutes. During this period, the light flashes every 10 seconds and any key press causes a long signal. After expiration, entry of two more invalid codes, restarts the 5 minute blocking period.

## Safety reference:

All codes are to be securely stored. Do not use personal data (i.e. Birthdays, telephone numbers etc.) as the code.  
Change the factory code before you start using the safe!




## Open.

Enter code (factory code = 1-2-3-4-5-6), unlock door and open. If not opened within 3 seconds, the lock secures automatically.  
If code entry failed on first attempt wait 20 seconds before re-entering.  
Three long beeps indicate the lock bolt is jammed.  
Release the handle and re-enter code.




## Change code: (with safe door open).

Press and hold Key [0] until double signal.  
The light remains on during the following actions.  
· Enter old code (double signal)  
· Enter new code (double signal) and repeat new code (double signal)  
In case of entry errors (long signal), the old code remains valid.

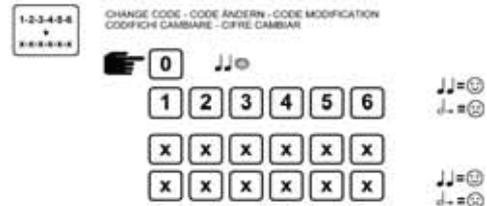

## Activate the second opening code:

Press and hold Key [1] until double signal.  
The light remains on during the following actions.  
· Enter main code.  
· Enter Secondary code twice (Double signal after each)  
(The secondary code can be changed like the main code.  
With the main code, the secondary code can be deleted. The main code cannot be deleted.)

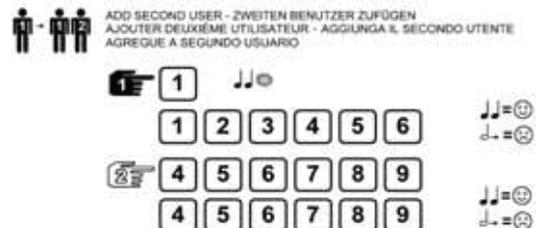

## Delete the secondary code:

Press and hold Key [3] until double signal.  
The light remains on during the following action.  
· Enter main code.  
The secondary code is deleted.



## Current supply / battery change:

A series of signals indicates that the battery is weak and must be replaced. Use only 9V **ALKALINE** Duracell Procell- or Energizer - batteries!  
The battery compartment is located at the bottom of the entry unit.



More information: Safetysset Oy Helsinki. Tel +358 207 809 370  
email: sales@safetysset.fi. www.safetysset.fi